



# TR - 2000LD 97

**A-RB**

TLD No.	PARTS NAMES	TLD No.	PARTS NAMES	TLD No.	PARTS NAMES
0001	Handle Lock Screw	0060	Pre-Load Spring A	0149	Lock Washer
0002	Handle Lock	0072	Pre-Load Washer A	0150	Idle Gear
0003	Handle Nut	0082	Dial Spring	0151	Left Side Plate
0005	Gear Shaft Shield	0084	Lever Thrust Ring	0153	Spool
0006	Gear Shaft Thrust Washer	0115	Pre-Program Dial	0154	Main Shaft
0008	Main Gear	0116	Lever Shaft Body	0155	Frame
0010	Body "O" Seal	0117	Drag Control Lever	0156	Level Wind Guard
0014	Click Spring Screw	0119	Lever Click Spring	0157	Stabilizer Bar
0016	Strike Stop	0120	Free Spool Detent	0158	Worm Shaft
0017	Pressure Spring	0121	Lever Quadrant	0159	Friction Shoe
0018	"C" Lock	0122	Side Plate Bolt	0160	Friction Shoe Spring
0019	Quadrant Anchor Bolt	0126	Pinion Guard	0161	Thrust Washer
0020	Bolt Shield	0128	Drag Plate	0162	Line Guide
0021	Quadrant Screw	0129	Titanium Drag Washer	0163	Worm Shaft Spacer
0025	Dog Spring	0132	"C" Lock	0188	Right Side Plate
0026	Dog	0133	Pre-Load Body	0189	Cooling Shield
0027	Dog Spring Retainer	0134	Click Gear	0190	Brake Collar
0029	Pinion Gear	0135	Click Gear Screw	0207	Handle
0031	Seal Lock	0137	Worm Shaft Retainer	0209	Click Pawl
0037	Pressure Release Spring	0138	Worm Shaft Holder Washer	0210	Click Pawl Washer
0039	"C" Lock	0139	Worm Bearing	0211	Click Button
0043	Pre-Load Washer B	0140	Line Guide Cover	0212	Ball Bearing
0044	Pre-Load Spring B	0141	Pawl Cap	0213	Ball Bearing
0050	Cross Pin B	0142	Line Guide Pawl	0214	Ball Bearing
0053	Click Button Washer A	0144	Level Wind Guide		
0056	Click Spring Screw	0148	Click Spring		